



***baja designs***<sup>®</sup>  
THE SCIENTISTS OF LIGHTING

**Dodge Ram (19-On) 2500/3500  
Reverse Kit, S2 Sport Wide Cornering  
44-8038**



2950 Norman Strasse Rd • San Marcos • CA • 92069

Phone 760-560-2252 X3 • Fax 760-560-0383

info@bajadesigns.com • [www.bajadesigns.com](http://www.bajadesigns.com)



**baja designs**<sup>®</sup>  
THE SCIENTISTS OF LIGHTING

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.**

**Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.**

## Dodge Ram 2500/3500 Reverse Kit Instructions

### Tools Required

- 4mm Allen wrench
- 10mm Socket wrench
- 2.5mm Allen wrench
- 9/16" Socket wrench
- 9/16" wrench
- Electrical tape

1. Using the 4mm Allen wrench, assemble the two S2 lights to the standard S2 brackets with the provided hardware.

Note: hand thread the 3/8" hardware through the bracket first.

2. Using the 2.5mm Allen wrench, remove the bezel bolts from each S2, and rotate the bezel 180 degrees. Do not let the lens fall off. Thread in and tighten the bezel bolts.



3. Mount the driver side reverse kit bracket to the inside of the rear bumper in the circled location on the right using the 10mm socket wrench.

4. Using the 9/16" wrench and socket mount an S2 assembly to the driver side bracket.

5. Repeat steps 3-4 for the passenger side.

6. Connect the splitter harness to each light with the open plug on the passenger side.





7. Connect the Reverse Tap harness to the splitter.

8. Locate the trailer wire plug located behind and above the hitch receiver under the bed. Strip back the tape and secure the splice connector around the center wire (reverse light wire). Replace the tape and ensure the wires are secure.

9. Locate the common ground on the passenger side frame rail near the spare tire. With the 10mm wrench, remove the nut, place ground eyelet over and tighten nut. Tie wires away from hot and/or rotating components.



Re-torque all the fasteners after 100 miles.

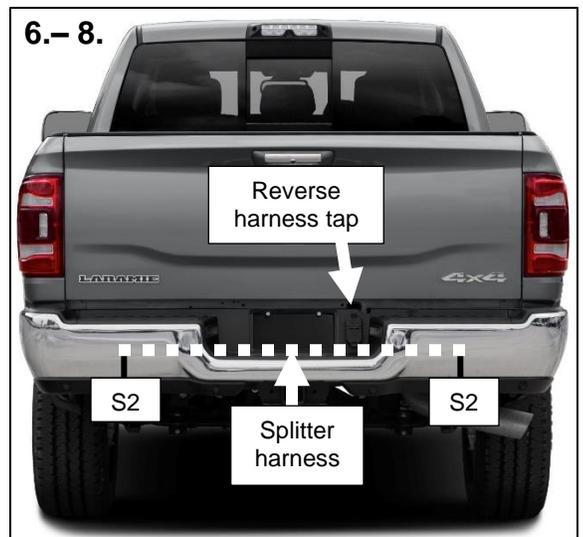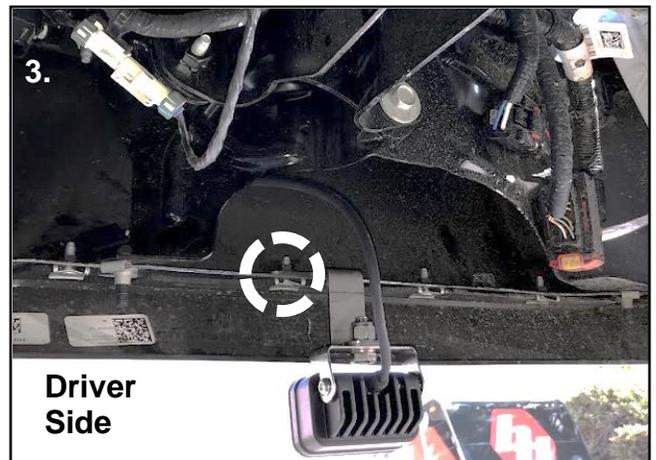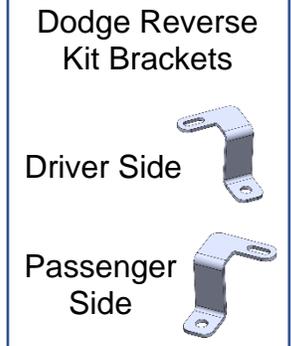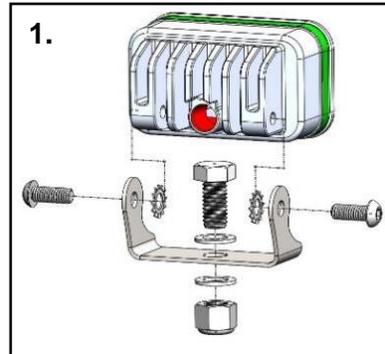

Your install is now complete! Thank you for choosing Baja Designs.