

Rally Innovations P/N: RI-LCN001

Baja Designs PN: 44-7002

Application: Light Conversion


PACKAGE CONTENTS				TOOLS
QTY		QTY		7/16" Socket and Wrench 5/32" Hex Key
2	Baja Designs Squadron LEDs	4	1/4"-20 x 1" Hex Bolt	
2	Light Conversion Brackets	4	1/4"-20 Hex Nut	
(1)	Wiring Harness (excl. Pigtail Adapter)	8	1/4" Flat Washer	
(2)	Pigtail Adapters (excl. Wiring Harness)	4	1/4" Lock Washer	
2	Baja Designs Connector Kit			

INSTALLATION INSTRUCTIONS

1



Remove the fog bezels, splash guard, or front bumper cover to gain access to the fog lights. Disconnect and remove fog lights.

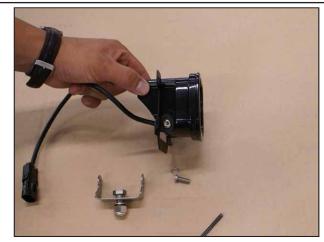

Replace Baja Designs mounting brackets with Rally Innovations brackets. Ensure that the tabs face forward.

2



Attach Squadron assemblies to front bumper cover. Fasten with OEM hardware or included 1/4" hardware. Wire, test, and reinstall fog bezel, splash guard, or bumper cover.

For vehicle-specific instructions, please contact Rally Innovations for more info.

info@rallyinnovations.com (714)-884-0057

| 4