



**baja designs**<sup>®</sup>  
The Scientists of Lighting

## **Colorado, Canyon, Silverado, Sierra A-Pillar Kit**

**44-7603, 44-7604**



**2950 Norman Strasse Rd • San Marcos • CA • 92069**

**Phone 760-560-2252 • Fax 760-560-0383**

**info@bajadesigns.com • www.bajadesigns.com**



**baja designs**<sup>®</sup>  
The Scientists of Lighting

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all of the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a particular purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee

### **Indemnification:**

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.


Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.

## A-Pillar Kit Installation Instructions

**Step 1:** Remove backing and place a 1" x ½" adhesive backed rubber strip onto each A-pillar bracket.



**Step 2:** Remove the two hood bolts while another person supports the hood. The bracket containing the colored sticker is the passenger's side, place the A-pillar bracket on top of the hood hinge and reinstall the hood bolts.

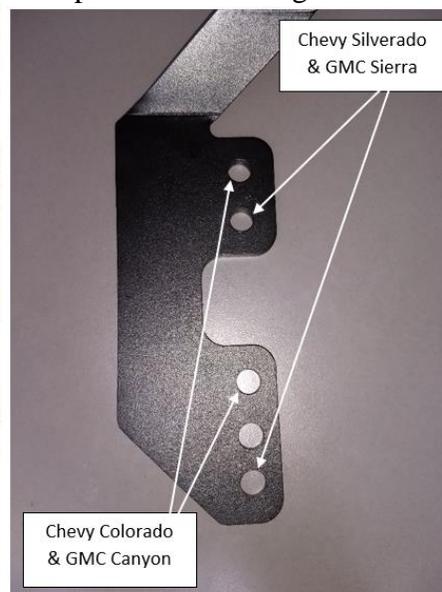

*Note: Do the driver and passenger side independently so the hood does not become misaligned.*

**Step 5:** Install Squadron lights onto brackets using the supplied 3/8" bolts, washers and nyloc nuts.



**baja designs**  
The Scientists of Lighting

*Note: Be sure to route and zip tie the light's wiring and wire harness away from the hood hinges and hot or rotating components so they do not get damaged while opening and closing hood or the with the engine running.*

### Wiring Guide



1. Use the provided harness and connect both A-Pillar lights.
2. Determine a desired dash location for the toggle switch. Using a  $\frac{3}{4}$ " stepped drill bit, drill a hole. Be mindful of what is behind the dash and remove dash if necessary.
3. Take a quick picture of the switch terminals for reference later. Remove the switch terminals from the switch, run the harness through the firewall and through the desired dash location. Reattach the toggle switch and press into the dash.
4. Connect the +12V (red wire) to the positive battery terminal and the -12V ground (black wire) to the negative battery terminal.

***Re-torque all the fasteners after 100 miles.***

***Your install is now complete! Thank you for choosing Baja Designs.***