



**baja designs®**  
*The Scientists of Lighting*

## 2019 Ford Ranger A-pillar kit Instructions (44-7628, 44-7624)



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

[info@bajadesigns.com](mailto:info@bajadesigns.com) • [www.bajadesigns.com](http://www.bajadesigns.com)



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

## **LIMITED LIFETIME WARRANTY**

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.**




**baja designs**  
The Scientists of Lighting

### 2019 Ford Ranger A-pillar kit instructions

#### Tools Required

- 13mm Socket Wrench
- Standard Screwdriver (Flathead)
- 4mm Allen Wrench
- 9/16" Wrench
- 9/16" Socket Wrench

1. To begin, locate the upper hood hinge bolts circled in the picture below. These will be used to mount the A-Pillar brackets.

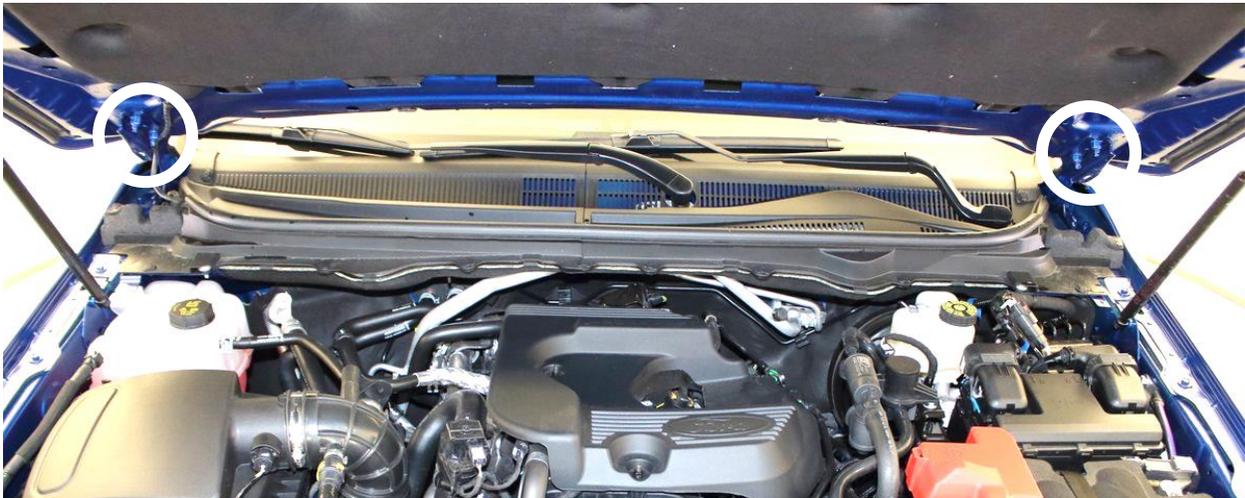


2. Place masking tape along the hood hinges (shown below) to ensure proper realignment. Also, place masking tape along the back edge of the hood near the windshield to prevent any scratches when aligning the bracket.





**baja designs**  
The Scientists of Lighting

3. For the next steps, it is **highly recommended** to have another person closeby for assistance. Ask assistant to hold upper hood hinge against the hood to prevent any movement when the nuts are removed. With the 13mm Socket Wrench, remove the nuts.
4. Locate the driver side bracket. Place the bracket over the hood studs and hand tighten the nuts. Make sure the bracket clears the back edge of the hood and the upper hood hinge is aligned with the masking tape from step 2. Tighten the nuts snug. Repeat step 3-4 for passenger side.
5. Unbox the Squadron lights and locate the brackets and part bags. Assemble the lights to the brackets as shown in the exploded image below. Note: assemble 3/8" hardware into the bracket before mounting the light.

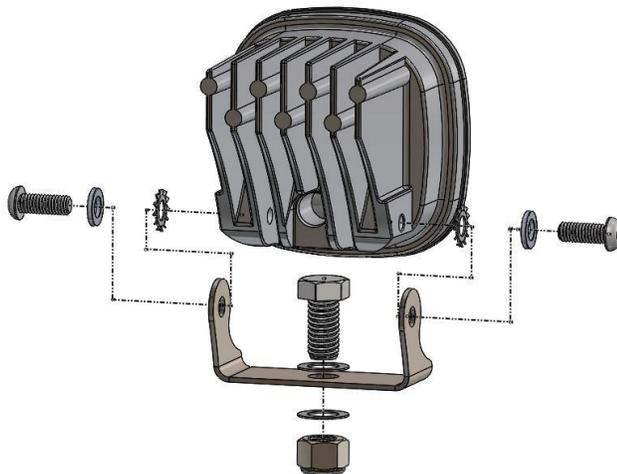

6. Close the hood. Now with the 9/16" wrench and socket, the lights can be placed onto the A-pillar brackets, aimed, and tightened.

Re-torque all the fasteners after 100 miles.

See the instructions supplied with the wiring harness to complete wiring needs.

Your install is now complete! Thank you for choosing Baja Designs.