



***baja designs***<sup>®</sup>  
THE SCIENTISTS OF LIGHTING

## Toyota, Rav4 (12'-21') and Highlander (14'-19') Squadron Fog Pocket kit Instructions



2950 Norman Strasse Rd • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

[info@bajadesigns.com](mailto:info@bajadesigns.com) • [www.bajadesigns.com](http://www.bajadesigns.com)



***baja designs***<sup>®</sup>  
THE SCIENTISTS OF LIGHTING

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.**


**Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.**

## Rav4 & Highlander Squadron Fog Light Kit Instructions

### Tools Required

- Phillip's Head Screwdriver (Short)
- 10mm Socket Wrench
- Test light, or Multimeter
- Trim Tool (Or Flathead Screwdriver)
- 4mm Allen Wrench

1. To begin, turn the wheels completely in the opposite direction of the first side that will be installed. Place vehicle into park and turn off the ignition.
2. With the 10mm socket and trim tool (or flathead screwdriver), remove the inner fender fasteners at the front of the wheel well. (\*\*Years vary)
3. With the 10mm socket wrench, remove the splash guard at the bottom of the front fender well.
4. Unplug the OEM fog light connector. With the Phillip's Head screwdriver, remove the mounting screws and place the light aside.
5. With the provided hardware, mount the brackets to the light using the 4mm Allen wrench. (Use image for reference).
6. Place the light assembly into the fog mounting slots and place the screws into their holes hand tight. Tighten screws. **(The passenger side is more difficult with the windshield wiper fluid reservoir, so patience is required. – Rav4)**
7. Locate the fog light plug 'n play adapters. For a moment, turn on the vehicle, headlights, and fog lights. Determine which wire on the OEM fog light connector has (+) voltage and which wire is ground (-).
8. Turn vehicle off. Plug in the wiring adapters. The (+) wire will need to be inserted into the provided plug in the (B) pin location. The ground will then be inserted into the (A) location.
9. Replace the fender well, lower splash guard, and all associated fasteners. Repeat steps 1-8 for the opposite side.

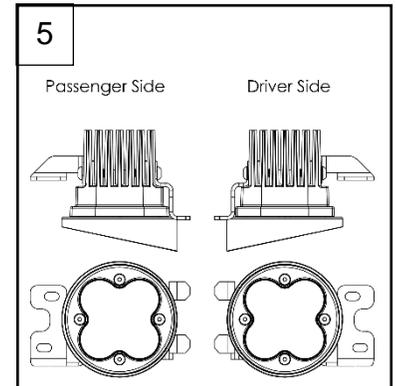

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.