



***bajadesigns***<sup>®</sup>  
*The Scientists of Lighting*

**Ford Super Duty (11-16)  
30" Grille Kit Instructions  
44-7792**



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • [www.bajadesigns.com](http://www.bajadesigns.com)



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

## **LIMITED LIFETIME WARRANTY**

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies**

## **Tools Required**

- 10mm, 7/16" Socket
- Flat Head Screwdriver



1. Using a 10mm socket, remove the 4x bolts located on top of the grille.
2. Carefully pry on the top of the grille to allow access to the clips securing the bottom.



3. With step 2, push on the top of the 4 self-locking tabs allowing the grille to be removed.
4. Using snips, remove some material from the bridge of the grille. Keep test fitting the light until a proper fit is achieved.




5. Using the supplied spacer and brackets, attach the brackets to the light bar as shown.
6. Using the supplied M6 bolt, attach the light to the back of the grille as pictured. Ensure the light is centered in the slot and the desired angle is achieved.

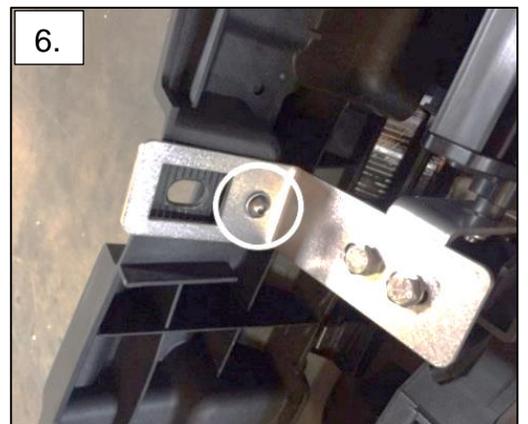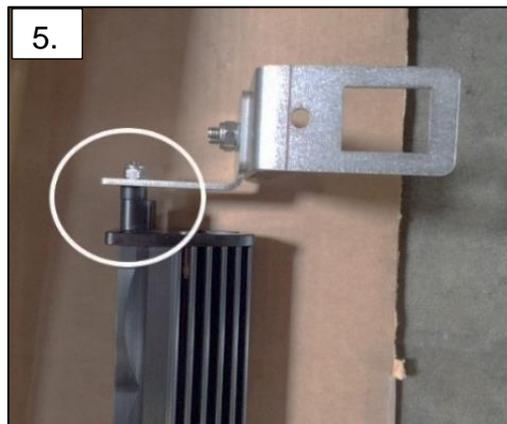


7. Plug in the up-fitter harness to the light bar. Route the wiring as shown.




8. Behind the battery, locate the fuse box and chassis ground. Underneath the fuse block is the upfitter (auxiliary) wires. Find the brown wire (15A, Aux 4 switch), and set aside.

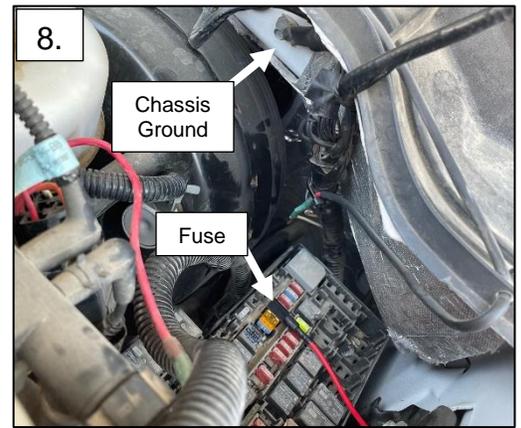

9. Remove the fuse box lid and the 15 amp fuse from slot 33 (Vehicle Power). Refer to the lid for fuse locations. Place the 15 amp fuse into the fuse tap shown.

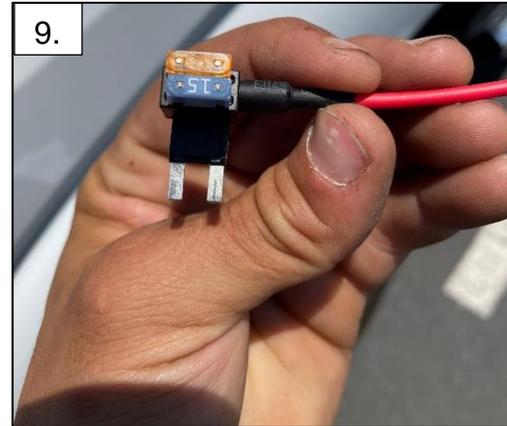


10. Separate the wires on the up-fitter harness. Each wire corresponds as shown.

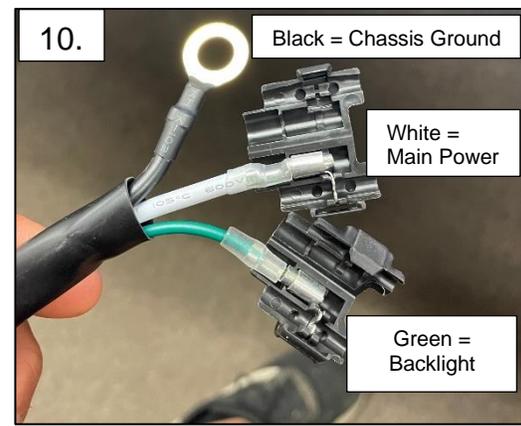


11. Remove the splice connector from the green wire.



12. Place the brown up-fitter wire into the splice connector attached to the white wire and close the plastic housing. Connect the fuse tap to the green wire with the female side of the bullet connector. Apply heat to the clear heat shrink to protect the bullet connectors.

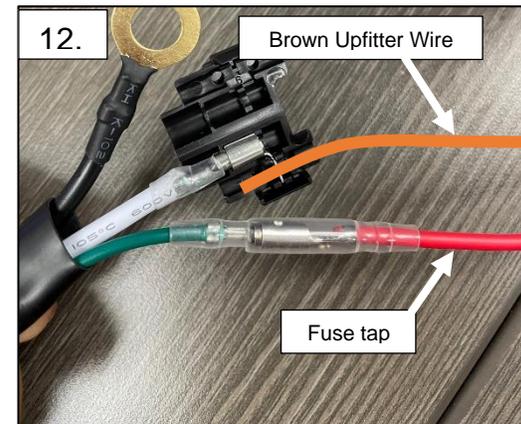

13. Attach the ground ring terminal to the chassis ground. Reinstall the fuse lid and front grille.

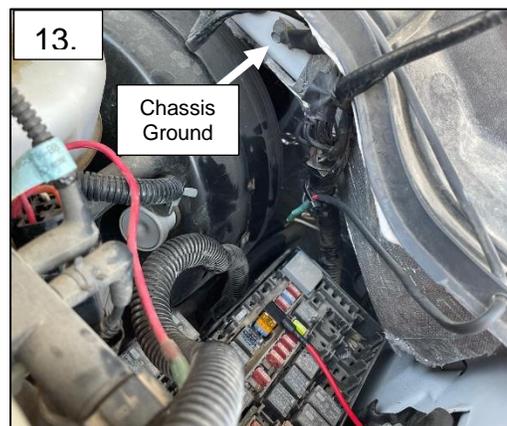

14. Now your front light bar will be powered by auxiliary switch #4 and the back-lighting feature will be powered with the key in the on position.



Tie all wires away from sharp, hot, and/or rotating components.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.