

Polaris RZR XP 1000, XP Turbo, Turbo S (All Years) A-Pillar Kit Instructions 44-7820, 44-7821, 44-7822, 44-7823, 44-7824



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.


Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:


Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplie

Tools Required


- 10mm, 15mm, 7/16", 9/16" socket
- 7/16", 9/16" wrench
- Using a 15mm socket, remove the 2x bolts on the A-Pillar. With the supplied hardware, mount the new bracket on the outside of the cage as shown.
 - Tip: if the cage separates, use a punch to re-align the cage.
- **2.** Using a 9/16" wrench and socket, place the light mount on the bracket.
- 3. Using a 7/16" wrench. Attach the light to the bracket. Angle to achieve the desired lighting. Route the harness under the hood and out where the a-pillar goes through the hood. Plug the light into the harness.
- **4.** Repeat steps 1 3 for the opposite side. Route the wires to the terminal block.
- 5. Using a 10mm socket, place the red ring terminal on the accessory post. Place the black terminal on the ground post. Route the switch through the firewall just below the terminal block.
- **6.** Use one of the existing switch locations on the dash to place the new switch.

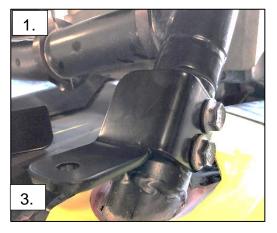




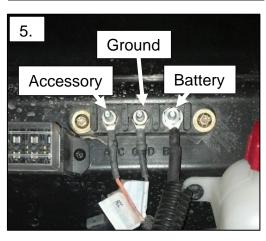



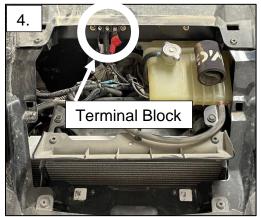

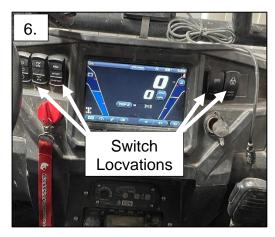

Tie all wires away from sharp, hot, and/or rotating components.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.