



bajadesigns[®]
THE SCIENTISTS OF LIGHTING

2024-2026 Chevrolet Silverado 2500/3500

Dual Fog Pocket Kit

S1s

99-1031, 99-1032, 99-1034



2950 Norman Strasse San Marcos, CA 92069

Phone 760-560-2252 X3 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
THE SCIENTISTS OF LIGHTING

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse, or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace it with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.

Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.

***For a color copy of instructions, visit your vehicle specific application on BajaDesigns.com ***

Parts List:

Required Tool(s):

- 18mm socket with ratchet
- Torx T15 screw bit/driver
- 7mm wrench or socket
- 10mm wrench or socket
- 15mm wrench or socket
- Installation time is approximately 3 hours
- This is an upgrade kit for vehicles with factory fog lights. It will work on trucks without factory fog lights however you will need to purchase the GM plastic bezel/mounting brackets from your local dealer.



P/N 99-1031	(38-7805) (Qty: 1) S1, Pair, Wide cornering, clear	(38-7805) (Qty: 1) S1, Pair, Wide cornering, clear	(LTW-1) (Qty: 2 pair) LTW Adaptor	(LTW-LB-7-DS) (Qty: 1) Driver Side bracket	(LTW-LB-7-PS) (Qty: 1) Passenger Side bracket
P/N 99-1032	(38-7805) (Qty: 1) S1, Pair, Wide Cornering, Clear	(38-7815) (Qty: 1) S1, Pair, Wide Cornering, Baja Amber	(LTW-1) (Qty: 2 pair) LTW Adaptor	(LTW-LB-7-DS) (Qty: 1) Driver Side bracket	(LTW-LB-7-PS) (Qty: 1) Passenger Side bracket
P/N 99-1034	(38-7815) (Qty: 1) S1, Pair, Wide Cornering, Baja Amber	(38-7815) (Qty: 1) S1, Pair Wide Cornering, Baja Amber	(LTW-1) (Qty: 2 pair) LTW Adaptor	(LTW-LB-7-DS) (Qty: 1) Driver Side bracket	(LTW-LB-7-PS) (Qty: 1) Passenger Side bracket

To begin, make sure the vehicle is in park, on level ground and the parking brake is engaged.

Retain all factory hardware for reinstallation.

Step 1: Under the hood you will remove the two T15 screws.




Step 2: Then slide out the hood latch. Next, remove the nine push-clips as shown.



Step 3: Then you will lift out the radiator shroud.



Step 4: Remove four 10mm bolts in the top of the grille. Then remove two T15 screws in both driver and passenger side wheel wells inside of fenders.

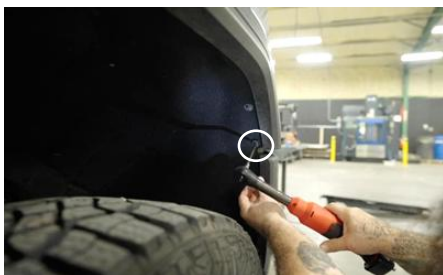

Step 5: Pop out front of fender trim. It will have two clicks when removing. Repeat on both sides.




Step 6: Remove the 7mm bolt behind the fender trim. Repeat on both sides. Remove the front corner panels on both sides. This is held in with clips.

Step 7: On the passenger side behind the front corner panels find the main wiring harness, as well as the front grille camera harness. Disconnect both.



Step 8: On the driver's side behind the front corner panels disconnect the camera cleaning hose. If the truck is equipped with a front bumper block heater (shown on the right), disconnect this harness as well.

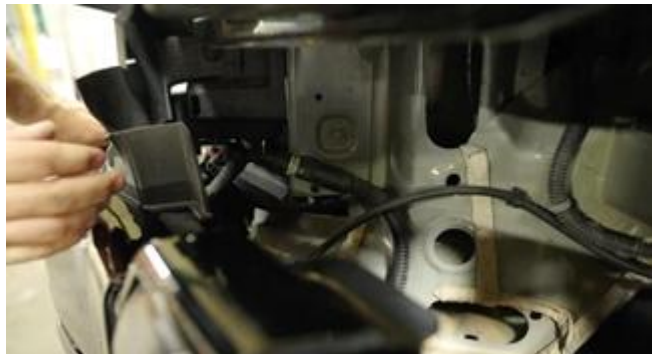

Step 9: Pull up on the grille to remove the locking tabs.



Step 10: Remove the front grille. Remove four 18mm bolts under the front grille.



Step 11: If the truck is equipped with aftermarket tow hooks remove them. If the truck has two stock hooks they don't need to be removed to take off the bumper. Remove four 15mm bolts underneath the bumper.



Step 12: Remove the front bumper. Place upside down on a work station, with a towel to prevent scratches.



Step 13: You will then remove all the bolts holding the bumper shell to the inner bumper structure.



Step 14: Next remove the trim piece on the top of the bumper. This is held in with push clips and should come right off.



Step 15: Pull the metal bracket to the side, revealing the fog light housing. Remove the three 7mm bolts to take out the factory fog light out of its housing.



Step 16: Disconnect the factory fog light harness and remove the factory light.



Step 17: Attach the provided adaptor to the factory harness.



Step 18: Use the supplied adaptors for one set of S1 lights. This will function as the OE fog light using the OE fog light switch.



Step 19: Use the supplied Baja Designs wiring harness for the second set of lights, mount relay, fuse holder, and switch to the desired location or wire to a switch panel.

Step 20: Reinstall the bumper following these instructions in reverse. This is a good time to aim the lights prior to installing the valance above the bumper.

*Tie all wires away from sharp, hot, and/or rotating components.

* Re-torque all the fasteners after 100 miles.

*Your install is now complete! Thank you for choosing Baja Designs.