



baja designs.
The Scientists of Lighting

2011-2016 Ford Super duty Fog Pocket Kit Instructions (44-7605)



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.



baja designs.
The Scientists of Lighting


11-16 Ford, Super duty Fog Pocket kit Instructions

Tools Required

- 10mm wrench
 - 10mm socket wrench
 - 7/16" wrench
 - 7/16" socket wrench
 - 8mm socket wrench
 - 1/2" Socket wrench
 - 4mm Allen wrench
 - 3mm Allen wrench
1. To begin, locate the bracket at the front of the passenger side wheel well pictured below. With the 1/2" socket wrench, remove the four bolts. Place bracket aside. Repeat for the driver's side.



2. Unplug the OEM fog light connector from the harness. With the 8mm socket wrench, remove the three bolts holding on the fog light assembly circled below. Carefully remove the assembly from the vehicle. Repeat for the driver's side.

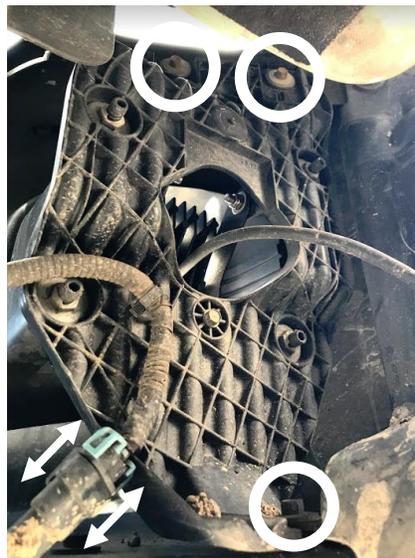



baja designs.
The Scientists of Lighting

3. Remove the plastic fog pocket shroud with the $\frac{1}{2}$ " socket wrench by removing the four fasteners circled below. Repeat for opposite side. Remove the factory fog lamp from the plastic bracket.



4. Using the 3mm Allen wrench, remove the four Bezel bolts (circled below) that hold on the standard Squadron bezel. Replace the bezel with the provided Super Duty bezel and retighten hardware. With the 4mm Allen wrench, screw in the Squadron housing bolts through the washer, bracket, serrated washer, and then into the light housing. Repeat for the opposite side of the housing.



5. Using the $\frac{7}{16}$ " wrench and socket wrench, tighten the $\frac{1}{4}$ " bolt into the washer, plastic bracket, steel bracket, washer, and nylon locking nut. Repeat for the adjacent fastener.

Note: steel bracket goes on the inside of the OEM plastic bracket mounts.





6. Reuse the OEM fog lamp bracket tilt adjustment hardware with the new bracket circled below.



7. Place the OEM fog pocket shroud onto the fog lamp assembly and check the fitment of the light bezel. Adjust the housing bolts and OEM tilt adjuster until desired fitment is attained. Replace the fog pocket shroud fasteners and tighten.
8. Repeat steps 4-7 for the opposite side of the vehicle.
9. Install the new fog lamp assemblies with the 8mm socket wrench and fasteners from step 2.
10. Attach plug 'n play adapter to the factory harness and Squadron power cord. Repeat for other side.
11. Re-install the brackets from step 1 with the ½" socket wrench.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.