



**Dodge Ram 2500/3500 (19-On)
Big Horn Fog Pocket Kit
44-8032, 44-8033, 44-8034, 44-8035**



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
The Scientists of Lighting

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

Dodge 2500/3500 Squadron Fog Pocket kit

Tools Required

- 4mm Allen wrench
- 7mm Socket wrench
- Flathead screwdriver
- 10mm Socket wrench


1. Disconnect the main fog lamp circuit connector clipped near the top of the driver side fog lamp bracket:



1a. Pull grey plug lock and unplug the connector.

1b. Pry the detent, then remove the other connector.

2. Pull down the red connector lock and squeeze detent (starred) to remove plug.

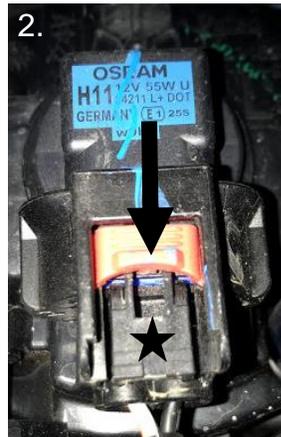


3. Remove 4 bolts with 10mm Socket wrench (Circled).



4. Remove the fog lamp. Repeat steps 2-3 for passenger side.

5. Remove the three fog lamp screws with the 7mm wrench. Repeat for the other side. **

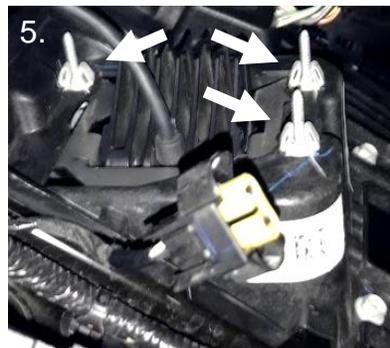


** Image shows the screws from behind with fog bracket still installed.

6. Assemble the Squadron lights to the brackets with the provided hardware and 4mm Allen wrench.

7. Mount the new fog lamp assemblies into the OEM fog bracket with the three screws from step 5. Repeat for other side.

8. Mount the fog lamp assemblies into the vehicle with four bolts from step 3.

9. Connect H11 plug 'n play adapter to lights and OEM connections for both sides.

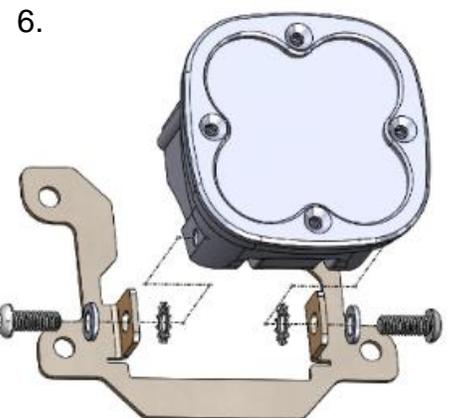

Re-torque all the fasteners after 100 miles.
Your install is now complete! Thank you for choosing Baja Designs.