

## **KTM Skene Dimmer Instructions**

**Squadron Dimmer Box (Optional):** If you intend on using a KTM dimmer box with your kit, please review the following notes:

- 1) Plug corresponding connector into stock KTM OEM harness.
- 2) Plug corresponding connector into Squadron/XL Pro light.
- 3) Take the connectors from photo 1 and plug the corresponding connector in line of the OEM flasher and OEM harness. This is a jumper to supply power to dimmer without having to splice or cut into the OEM harness.
- 4) Be sure to make sure that the Skene dimmer is securely fastened to the bike using either zip ties or the provided double sided tape.

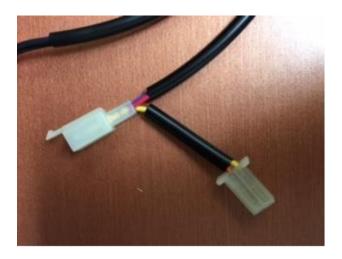




Photo 1

Photo 2

Please contact Baja Designs directly for customer support.

1-888-849-8624

https://www.bajadesigns.com/help/contact-us/?vid=152186